



32 Amp THREE PHASE DISTRIBUTION

Distro Cube SR32A



Incoming Connection	32/3Ø
Incoming Circuit Breaker	N/A
Outgoing Connection	3x 32/1Ø
Outgoing Circuit Breaker	3x 32A 30mA RCBO
ORDER CODE	SR32A

Distro Cube SRSRVA



Incoming Connection	32/3Ø
Incoming Circuit Breaker	32A 4P MCB
Outgoing Connection	1x 32/3Ø (through) 3x 32/1Ø 6x 16/1Ø
Outgoing Circuit Breaker	3x 32A 30mA RCBO 6x 16A 30mA RCBO
ORDER CODE	SRSRVA

Distro Cube SR16A



Incoming Connection	32/3Ø
Incoming Circuit Breaker	N/A
Outgoing Connection	6x 16/1Ø
Outgoing Circuit Breaker	6x 16A 30mA RCBO
ORDER CODE	SR16A

Distro Cube SRV



Incoming Connection	32/3Ø
Incoming Circuit Breaker	32A 4P MCB
Outgoing Connection	3x 32/1Ø 6x 16/1Ø
Outgoing Circuit Breaker	3x 32A 30mA RCBO 6x 16A 30mA RCBO
ORDER CODE	SRV

Distro Enclosure SR16/3A

Incoming Connection	32/3Ø
Incoming Circuit Breaker	N/A
Outgoing Connection	2x 16/3Ø
Outgoing Circuit Breaker	2x 16A 3P MCB
ORDER CODE	SR16/3A